


# INSTALLATION DIAGRAM FOR TITAN SCR-2 N-160

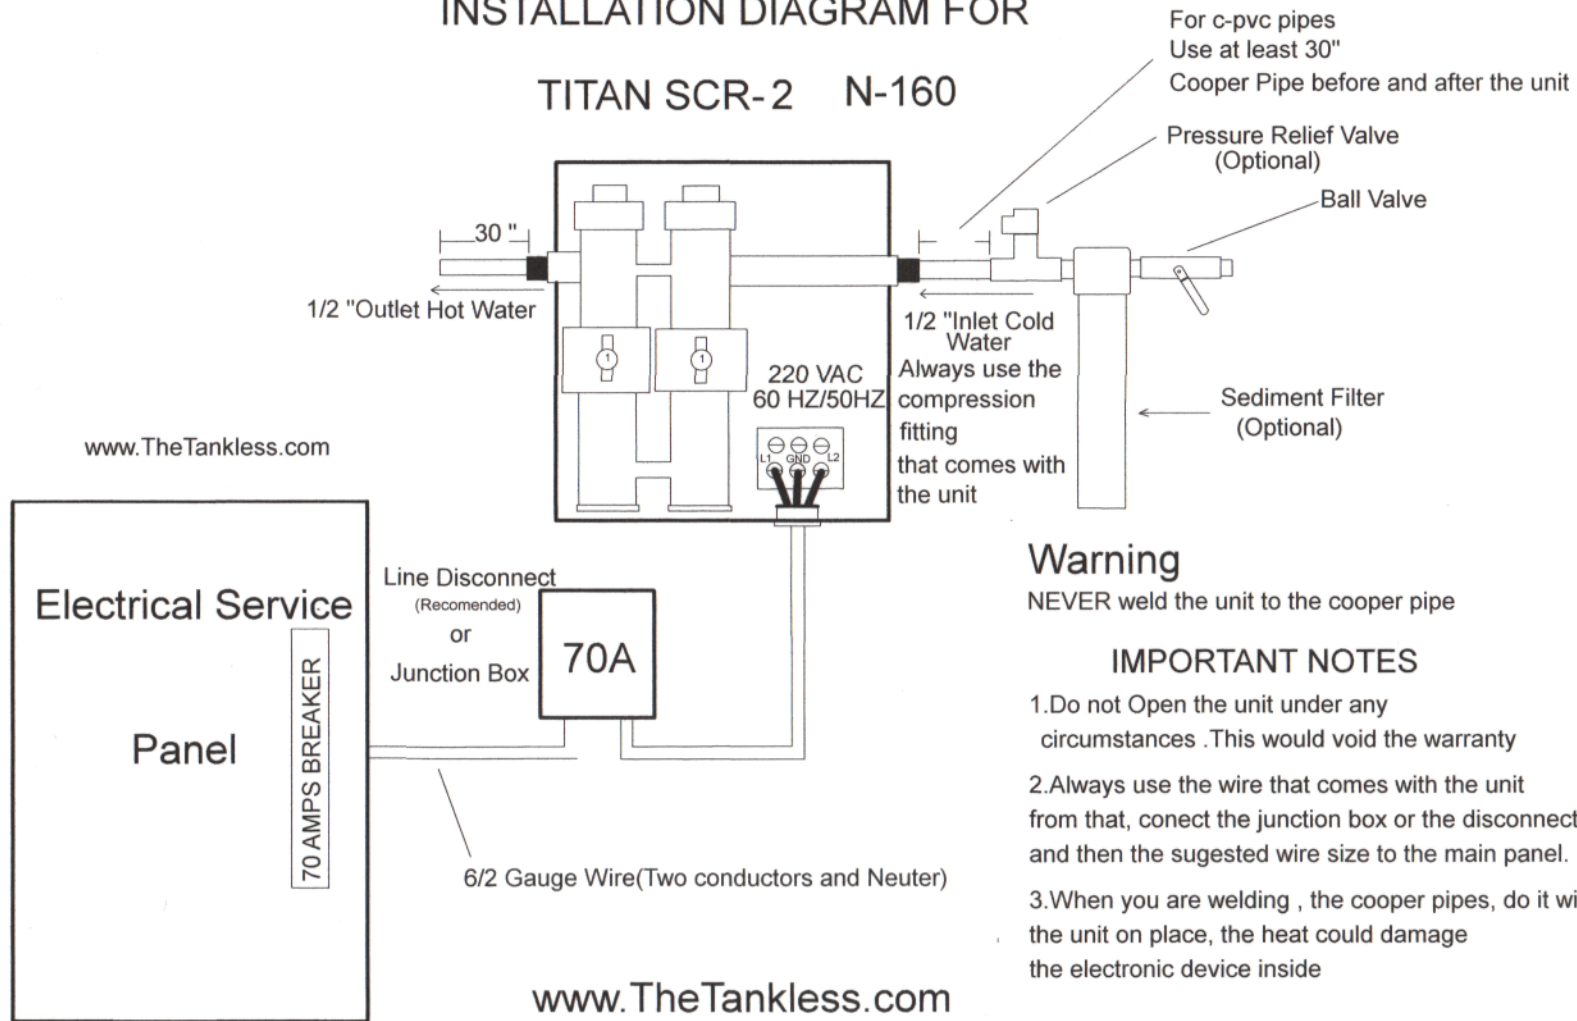

## Warning

NEVER weld the unit to the cooper pipe

## IMPORTANT NOTES

1. Do not Open the unit under any circumstances .This would void the warranty
2. Always use the wire that comes with the unit from that, connect the junction box or the disconnect sw and then the suggested wire size to the main panel.
3. When you are welding , the cooper pipes, do it without the unit on place, the heat could damage the electronic device inside