INSTALLATION DIAGRAM FOR TITAN SCR-4 N-210

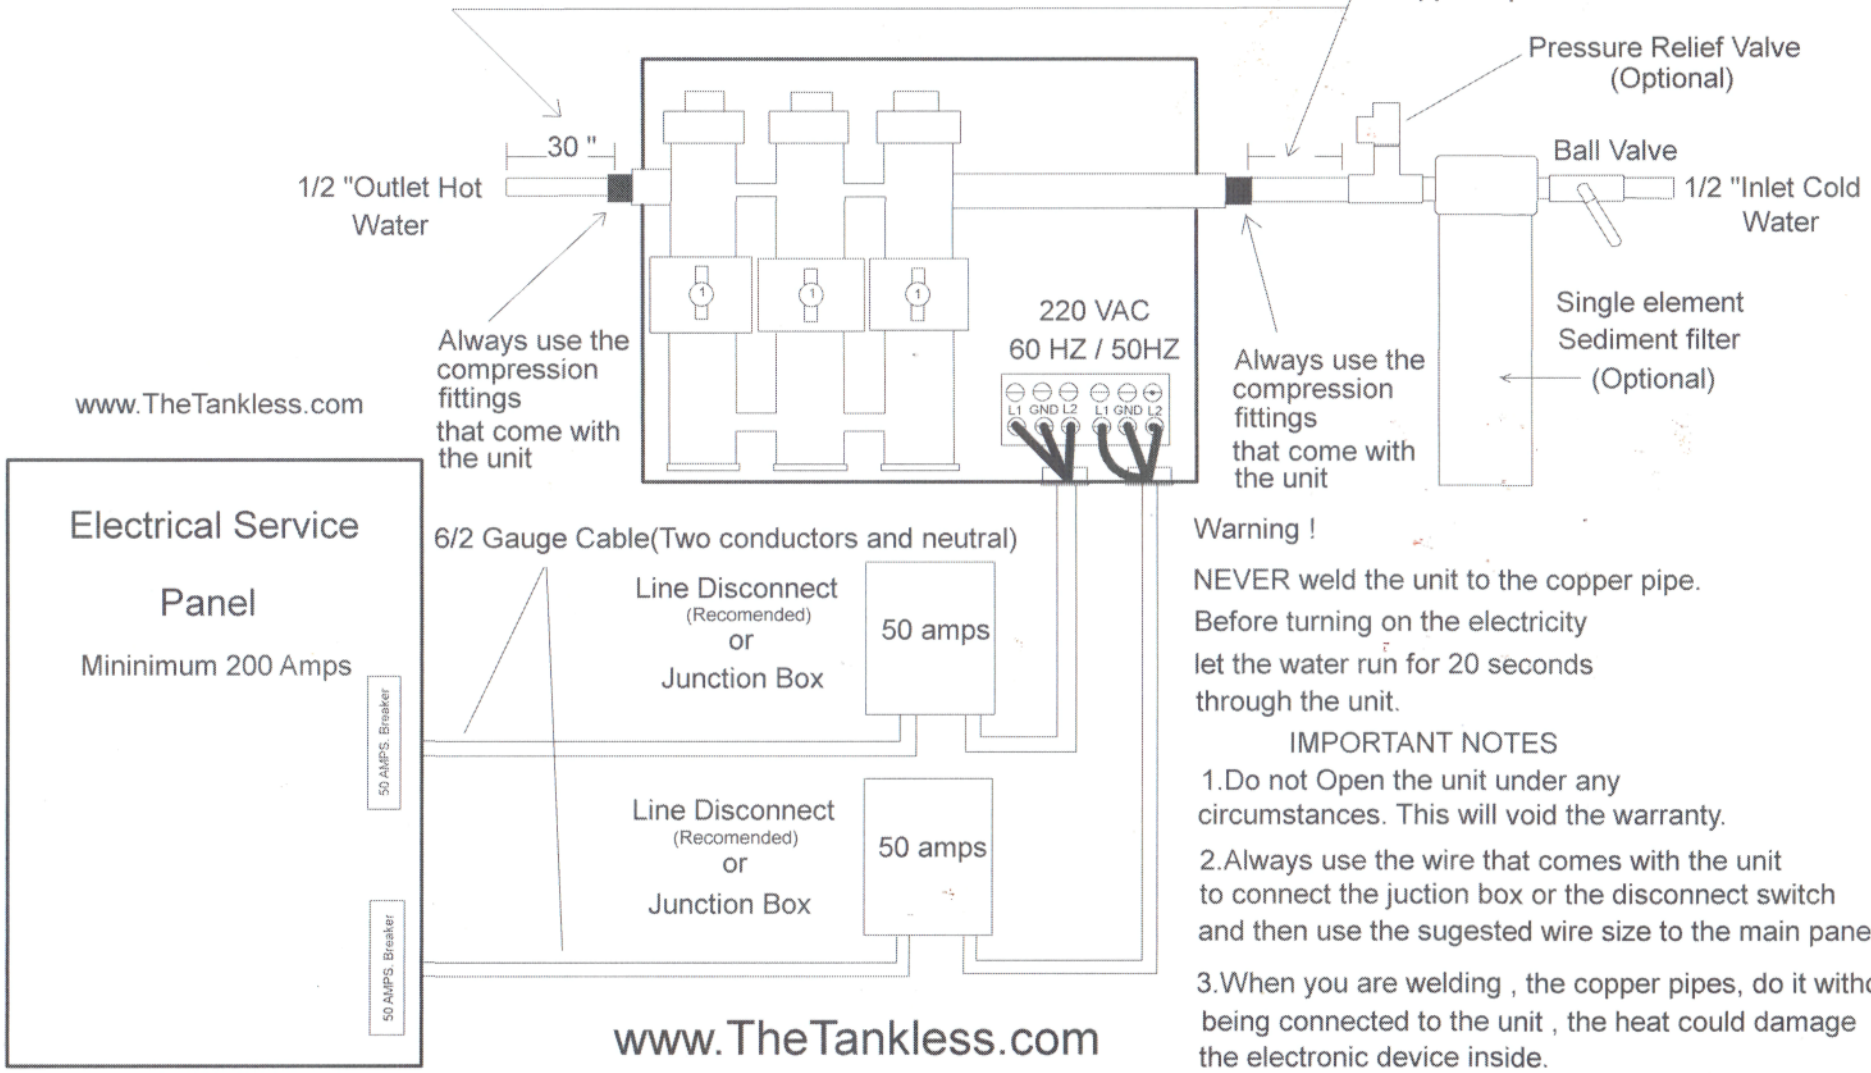

www.TheTankless.com

Warning !

NEVER weld the unit to the copper pipe.
Before turning on the electricity
let the water run for 20 seconds
through the unit.

IMPORTANT NOTES

1.Do not Open the unit under any circumstances. This will void the warranty.

2.Always use the wire that comes with the unit to connect the juction box or the disconnect switch and then use the sugested wire size to the main panel.

3.When you are welding , the copper pipes, do it without being connected to the unit , the heat could damage the electronic device inside.